



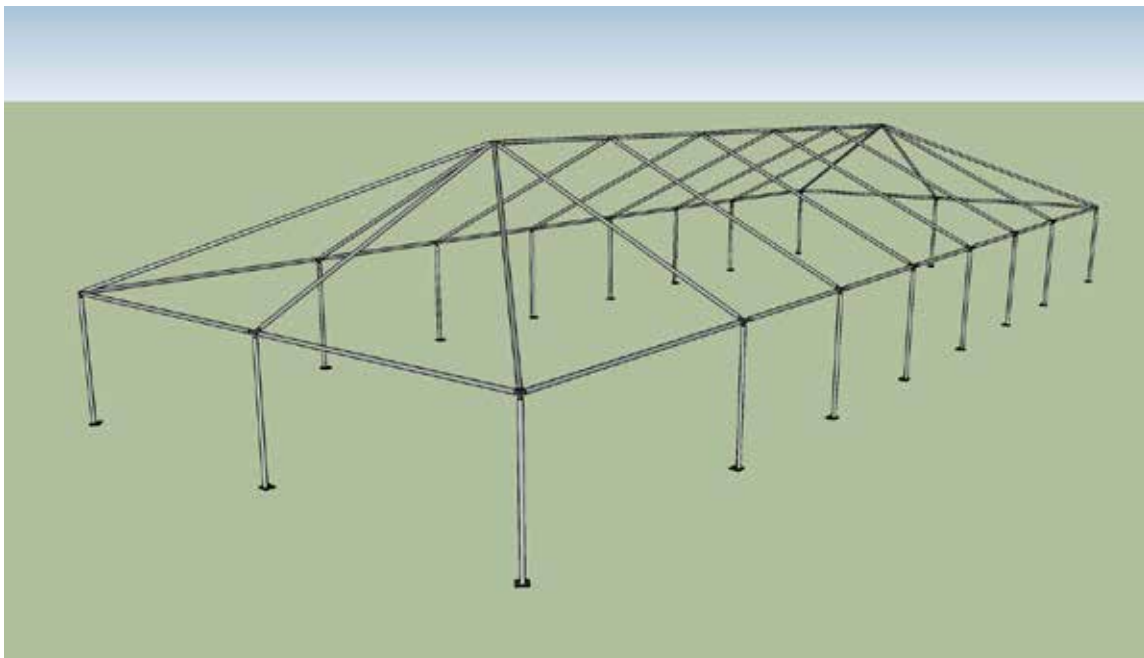


Ohenry 30'x80' Frame Tent



Ohenry Productions Inc. 3859 Chappel Hill Rd. Waco, TX. 76705
(254)714-1103 Office (254)714-1117 Fax



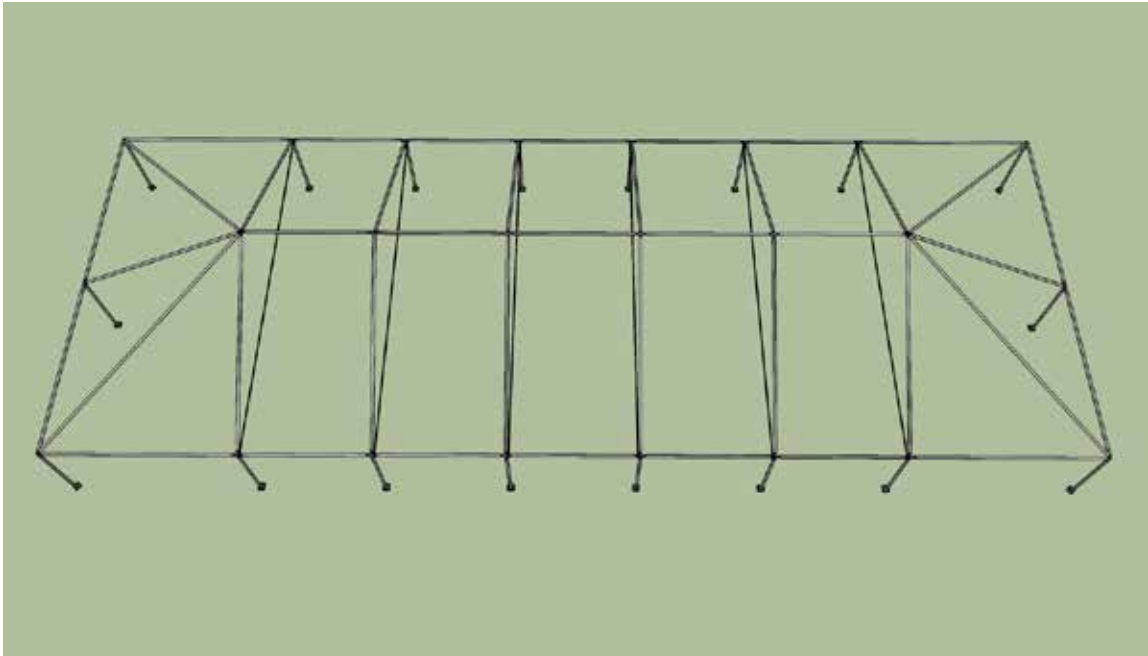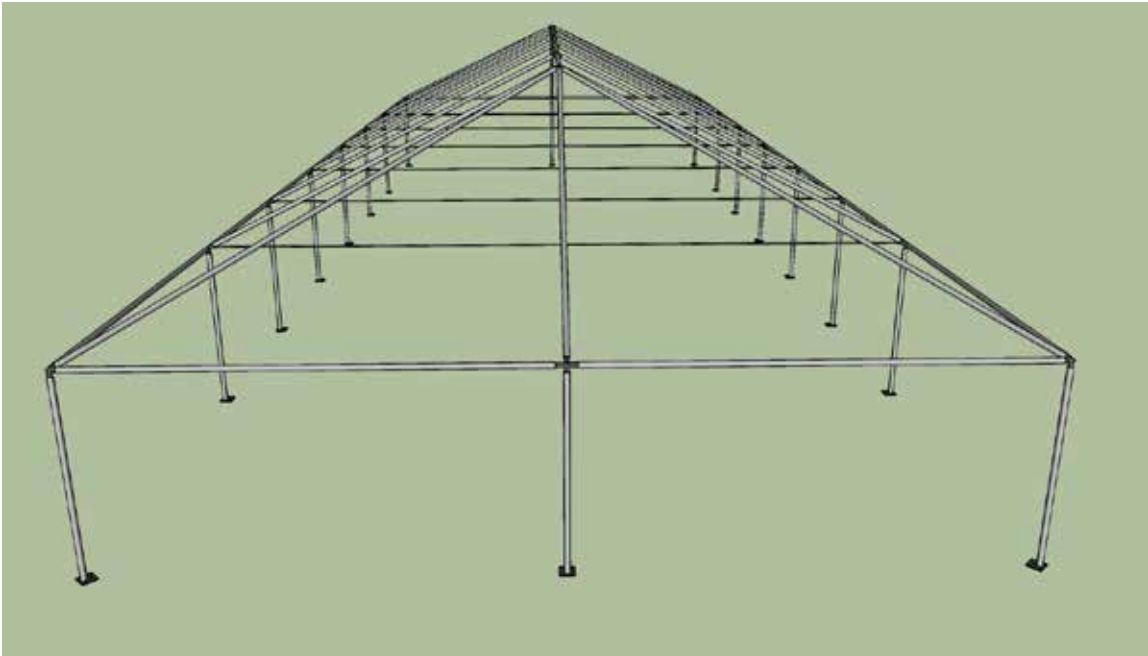



Ohenry 30'x80' Frame Tent




Ohenry Productions Inc. 3859 Chappel Hill Rd. Waco, TX. 76705
(254)714-1103 Office (254)714-1117 Fax

| Fittings | | |
|-----------------|----------------|------|
| 4 | Corner Fitting | 2111 |
| 2 | 6 Way Crown | 2116 |
| 14 | Side T Joint | 2112 |
| 4 | Ridge Top T | 2118 |
| 18 | Base Plates | 2114 |
| 6 | Cable 30ft | 2196 |
| 118 | Canopy Pins | 2115 |

| Poles | | |
|--------------|-----------|-----------|
| 4 | 21' 10.5" | Rafters |
| 14 | 16' 1" | Rafters |
| 8 | 14' 4" | Spreaders |
| 15 | 9' 4" | Spreaders |
| 18 | 6' 8" | Legs |

| Part Identification | |
|--|--|
|  <p>6 Way Center Crown</p> |  <p>Base Plate</p> |
|  <p>Side T</p> |  <p>Canopy Pin</p> |
|  <p>Corner Fitting</p> |  <p>Cable</p> |

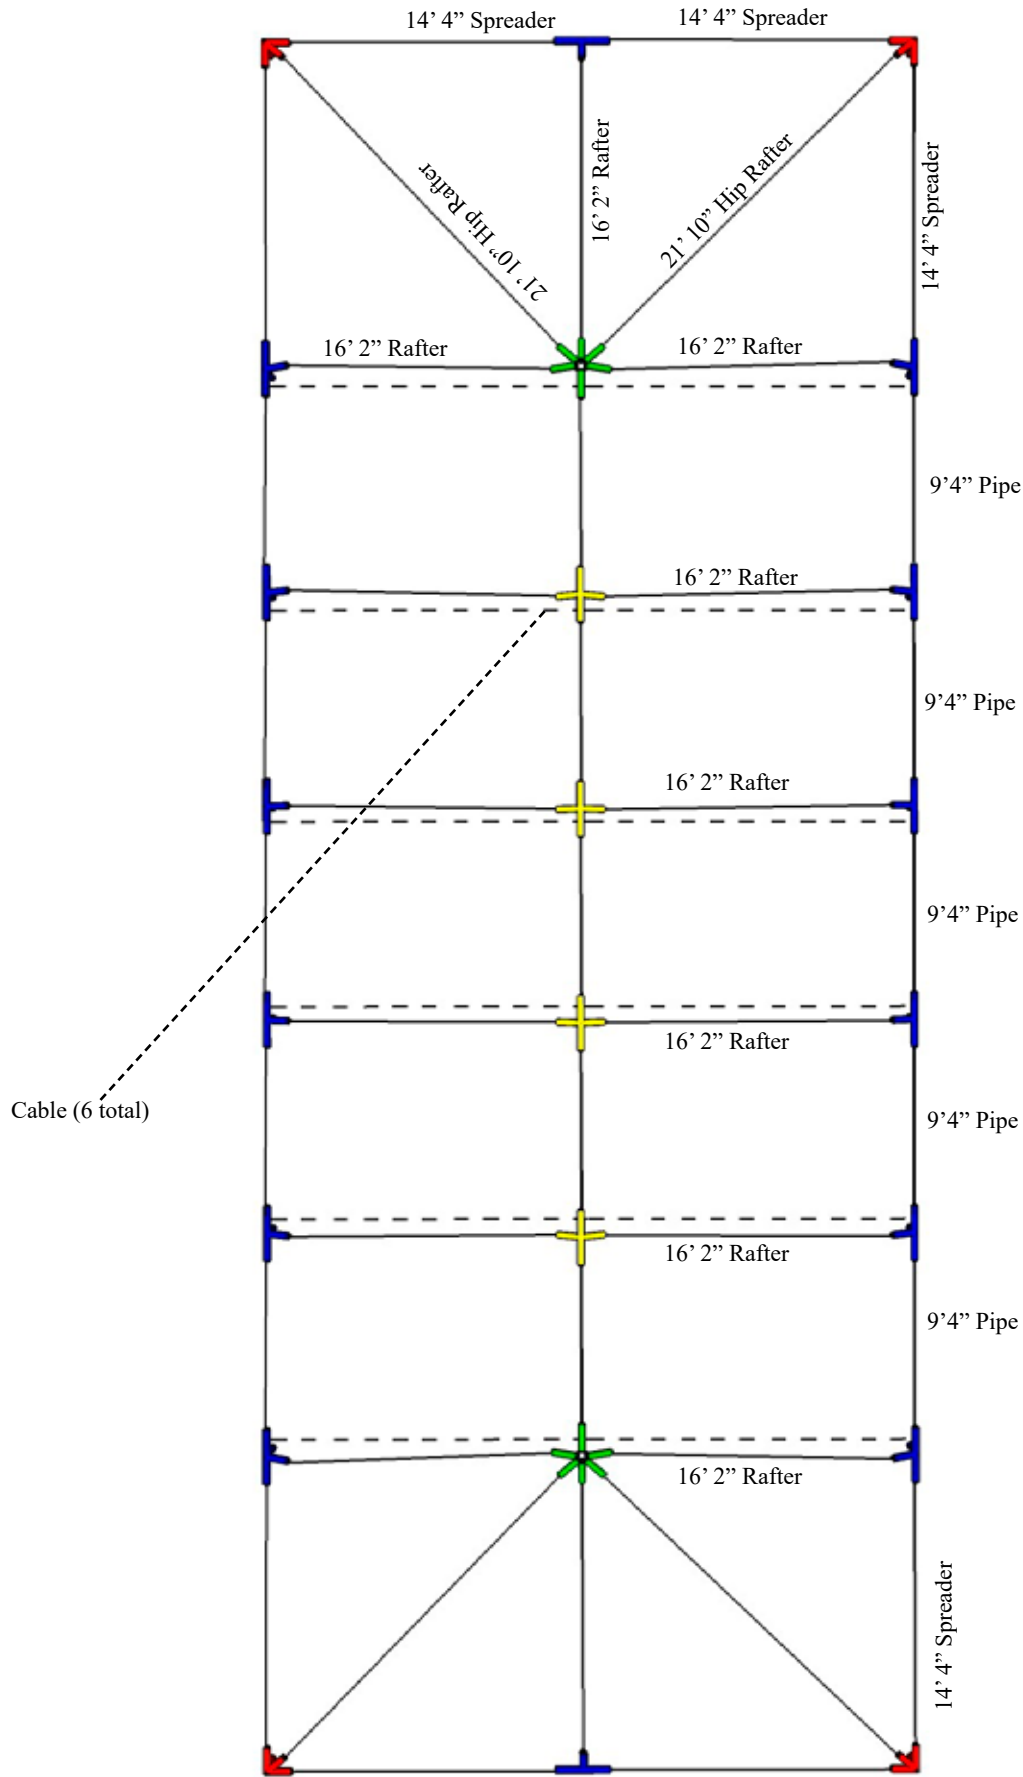

Ohenry Productions Inc. 3859 Chappel Hill Rd. Waco, TX. 76705
 (254)714-1103 Office (254)714-1117 Fax

“OHENRY WEST COAST FRAME TENT” ASSEMBLY INSTUCTIONS


30' wide – 40' wide

All tubing is labeled for easy Identification.


Please verify the parts with the chart provided before you begin assembly.

Assembly Steps:

1. Lay out the Spreader pipes and Corner Fittings in a square or rectangle (refer to previous page). Lay out Hip Rafters and Rafters and Side T Joints. Place Center Crown(s) in the center of the tent.

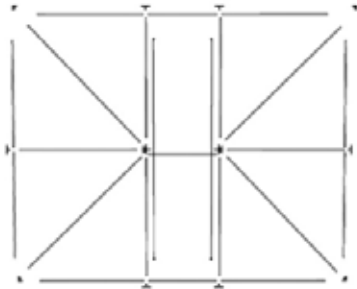

30' Wide

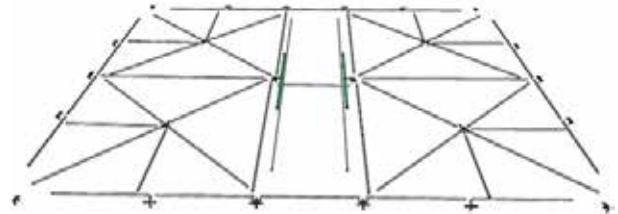


40' Wide

2. Start assembling the frame by inserting and pinning the Hip Rafters into the Center Crown(s). If assembling a rectangular frame insert and pin the appropriate Spreader into the Center Crown and continue to the next Ridge Top T or Center Crown. Insert and pin Rafters into the Crowns and Ridge Top T's. Insert and pin all Corner Fittings and Side T Joints to the bottom of the Hip Rafters and Rafters. Be sure to install cables at the Side T Joints (see cable drawing on last page).




30' Wide

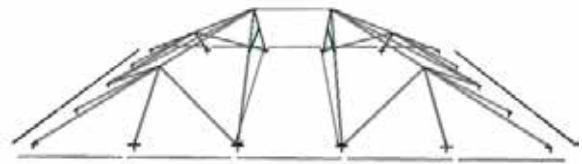


40' Wide

3. Start at one corner of the frame and insert and pin the Corner Fitting to the Spreader. Continue in one direction around the frame inserting and pinning each fitting to the Spreaders.

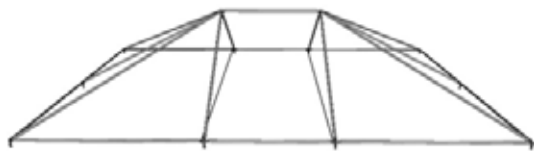


30' Wide

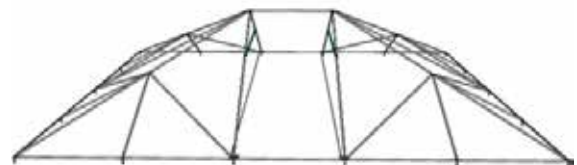


40' Wide

4. Unfold the tent cover on the ground next to the assembled frame. Place the cover on the frame. Be sure to center the cover while the upper structure is still on the ground.

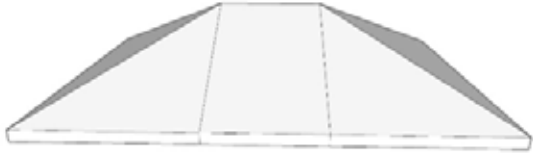


30' Wide

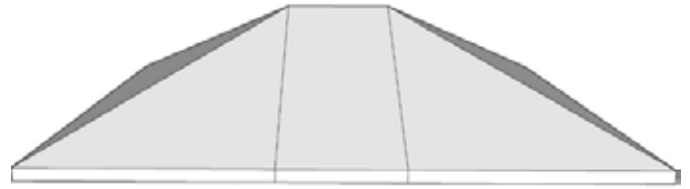

40' Wide

5. Lift one side of the tent and attach the legs (with base plates) and insert the pins. It is recommended that two people be available when lifting the frame to install legs.

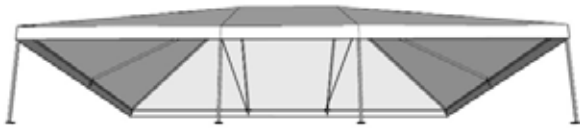

30' Wide



40' Wide

6. Lift the other side of the tent and attach the legs (with base plates). While this unit will stand on its own, it is NOT intended that the base plates be used as an anchoring method. The stakes should be driven approximately 5 feet away from the bottom of the leg. It is imperative the tent be secured with ropes and stakes or any other appropriate anchoring method. It is recommended that you do not bolt the base plates to any surface. Store the cover only when clean and dry.



30' Wide



40' Wide



Cable and Cross Brace Drawing for 30' wide & 40' Wide Frame Tents

