



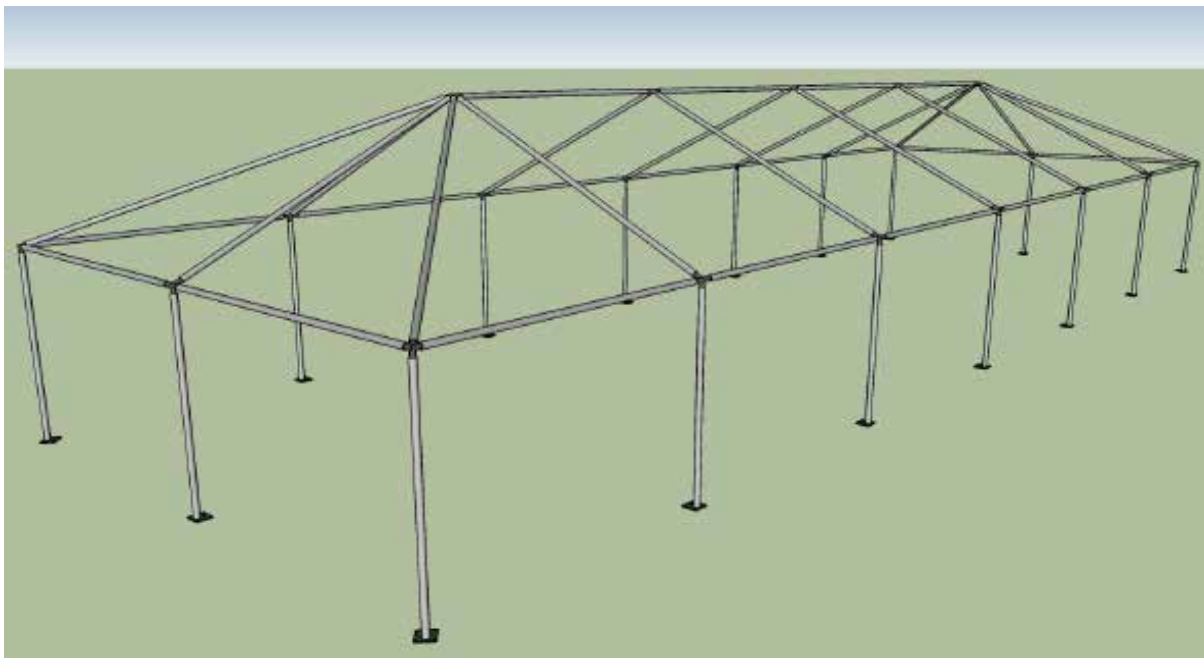


Ohenry 20'x60' High Peak Frame Tent



Ohenry Productions Inc. 3859 Chappel Hill Rd. Waco, TX. 76705
(254)714-1103 Office (254)714-1117 Fax

Ohenry 20'x60' Frame Tent

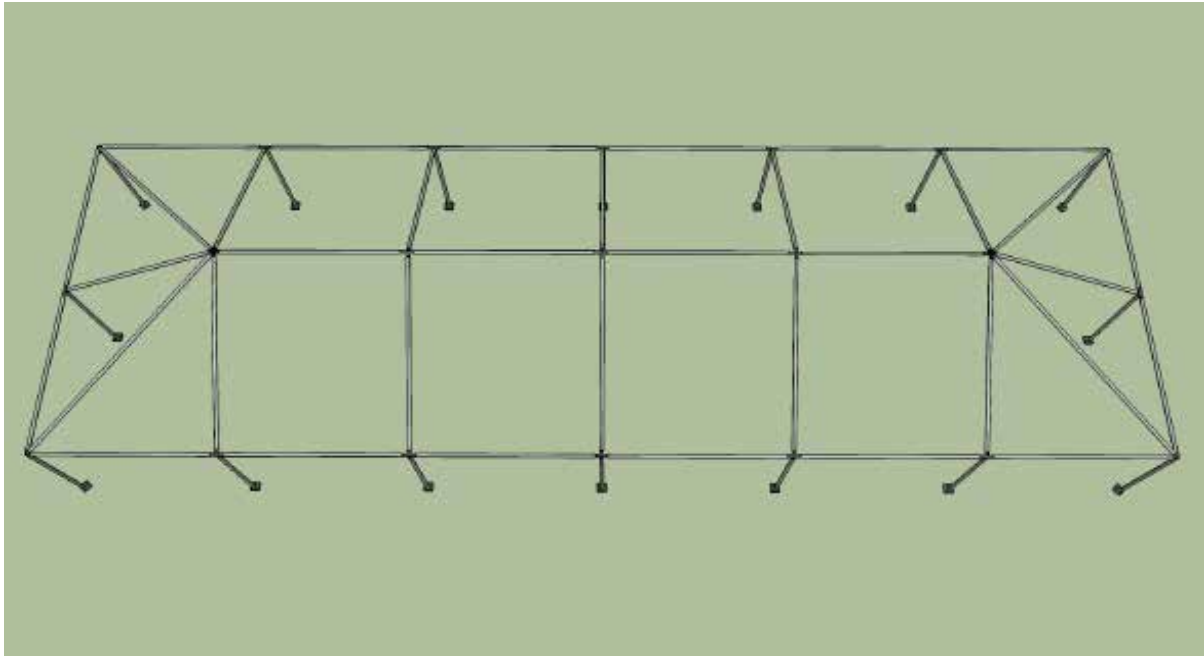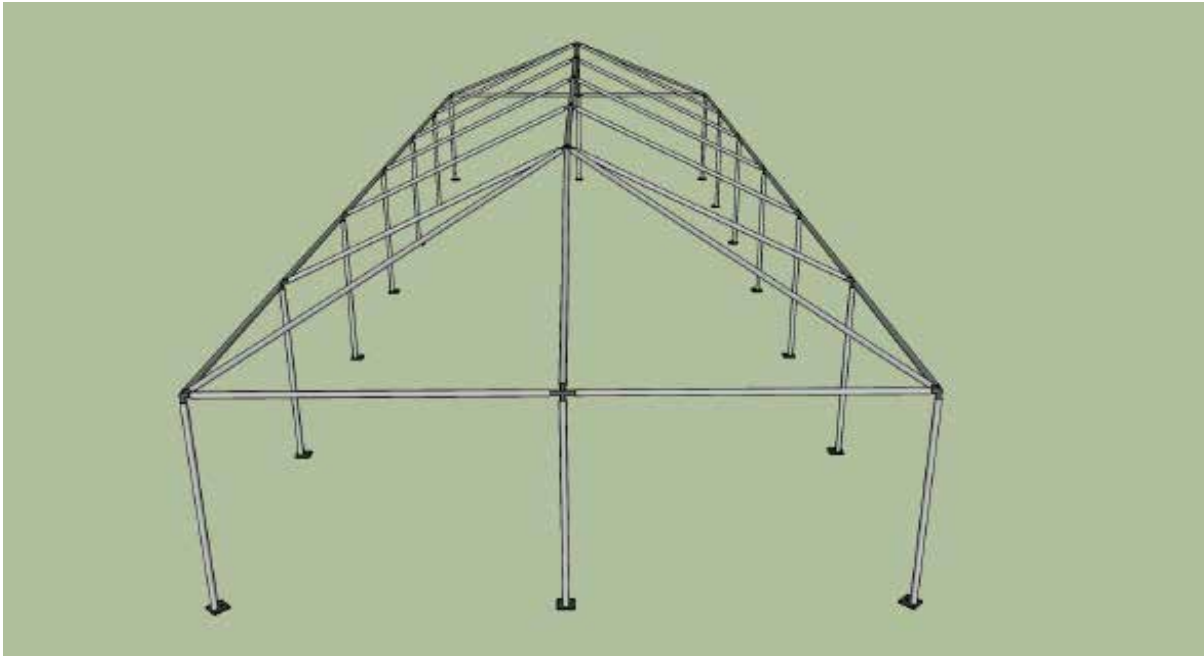
 







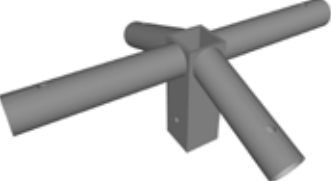



Ohenry Productions Inc. 3859 Chappel Hill Rd. Waco, TX. 76705
(254)714-1103 Office (254)714-1117 Fax

Fittings	
4	Corner Fitting
2	6 Way Crown
12	Side T Joint
2	Ridge Top T's
1	High Peak Ridge top T
16	Base Plates
104	Canopy Pins
16	Guy Ropes
16	24" Stakes
16	1" Ratchets

Poles		
4	14' 4"	Hip Rafters
12	10' 6"	Rafters
20	9' 4"	Spreaders
16	6' 8"	Legs

Mast Parts	
2	End Masts
1	Mid Mast
2	End Mast Inserts

Part Identification		
		
6 Way Center Crown		Premium Base Plate
		
Side T		Ridge Top T
		
Corner Fitting		Canopy Pin
		
End Mast	Mid Mast	End Mast Insert
		
		High Peak Ridge Top T

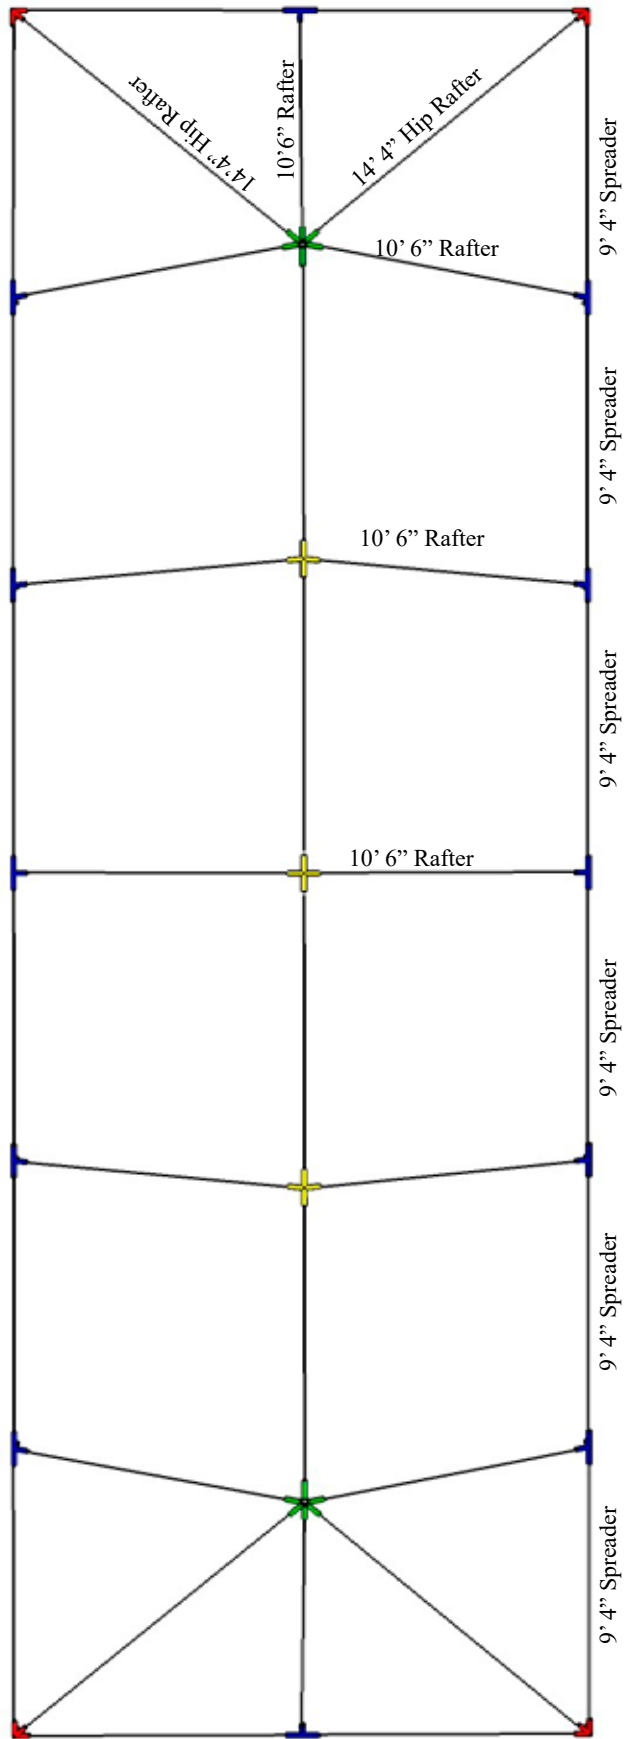

Ohenry Productions Inc. 3859 Chappel Hill Rd. Waco, TX. 76705
 (254)714-1103 Office (254)714-1117 Fax


“OHENRY WEST COAST FRAME TENT” ASSEMBLY INSTUCTIONS
10' wide – 20' wide

All tubing is labeled for easy Identification.

Please verify the parts with the chart provided before you begin assembly.

Assembly Steps:

1. Lay out the Spreader pipes and Corner Fittings in a square or rectangle (refer to previous page). Lay out Hip Rafters and Rafters and Side T Joints. Place Center Crown(s) in the center of the tent.

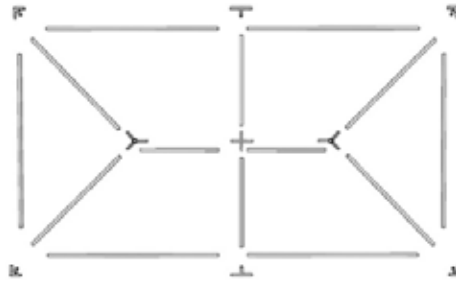

2. Start assembling the frame by inserting and pinning the Hip Rafters into the Center Crown(s). If assembling a rectangular frame insert and pin the appropriate Spreader into the Center Crown and continue to the next Ridge Top T or Center Crown. Insert and pin Rafters into the Crowns and Ridge Top T's. Insert and pin all Corner Fittings and Side T Joints to the bottom of the Hip Rafters and Rafters.




3. Start at one corner of the frame and insert and pin the Corner Fitting to the Spreader. Continue in one direction around the frame inserting and pinning each fitting to the Spreader.



4. Unfold the tent cover on the ground next to the assembled frame. Place the cover on the frame. Be sure to center the cover while the upper structure is still on the ground.




5. Lift one side of the tent and attach the legs (with base plates) and insert the pins. It is recommended that two people be available when lifting the frame to install legs.

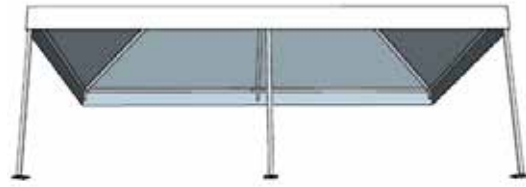


<p>6) Take the Mast Insert and insert it into the 3-way crown from the Top of the 6-way Center Crown.</p>		<p>11) Push the square mast up through the High Peak Ridge Top T from the bottom.</p>	
<p>7) Secure the Mast Insert to the center crown with the strap and buckle provided so the insert does not move when you insert the mast later.</p>		<p>12) Push the removable mast top into the hole in the center of the tent, then insert the top piece back into the mast and secure with a canopy pin.</p>	
<p>8) Remove the top cap from the round End Mast and insert the mast into the Mast Insert from the bottom (underneath the tent).</p>		<p>13) Push the mast up until the holes in the bottom of mast align with the holes in the bottom of the top T.</p>	
<p>9) Take the removable mast top with pin, insert pin through the hole in tent top, then insert the top piece into the mast and pin in place with the canopy pin.</p>		<p>14) Secure mast to Top T with canopy pins.</p>	
<p>10) Next push the mast all the way up until the two holes in the Mast Insert align with the two holes at the bottom of the mast. Secure with two canopy Pins.</p>			

15. Lift the other side of the tent and attach the legs (with base plates).

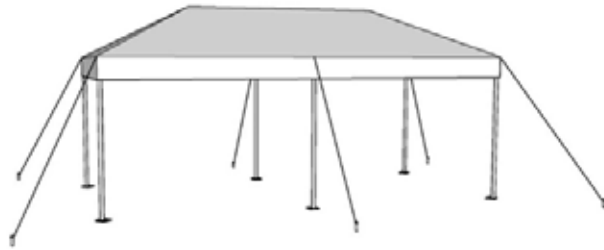

16) Next you will attach the end of the ratchet strap which has the metal clip (ratchets are included with your tent top) to the rings in the tent top at the corners and depending on size, the other locations on the tent top perimeter which have rings attached. Next attach the other end of each ratchet which has a ring attached to the base as shown in the photograph below. Tighten ratchet enough to have a slight tension. Do the same for each leg. Be sure tent is aligned correctly on the frame, and then retighten all the ratchets attached to the tent top and base plates as shown.

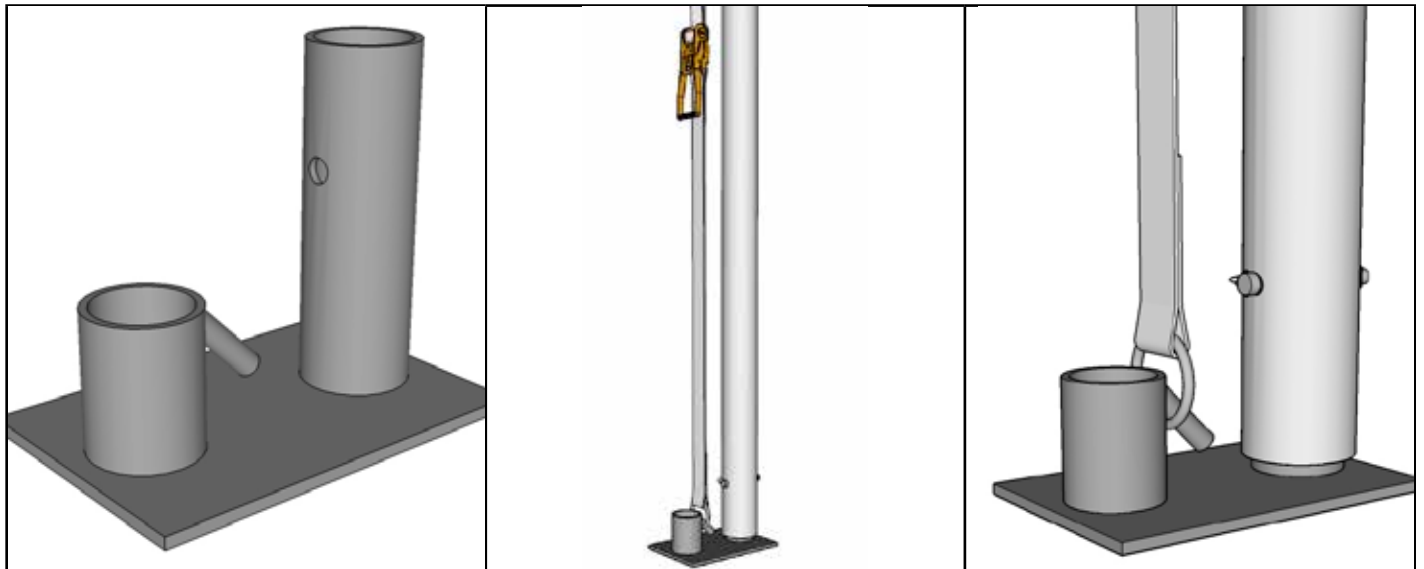

17. At each leg, now drive a tent stake into the ground about 5' from the edge of the tent. Attach the Guy Ropes provided with your tents and tighten securely to the tent stake. provided. **In the event of high winds, the cover should be removed from the frame to prevent damage to your tent. Your tent should be vacated during inclement weather.**