



## One Piece Pole Tent Instructions



**One Piece Tent Installation Instructions, Slide # 1** Place the tent which is still in the bag in the center of the area where you want to install the tent. Stand the bag up on the end, as shown, with the open end of the bag up. Untie the bag rope, and pull the bag halfway down the tent roll, then flip tent over so it is standing on the opposite end.



**One Piece Tent Installation Instructions, Slide # 2** Pull bag off the tent as shown.



**One Piece Tent Installation Instructions, Slide # 3** Untie the tent roll while the tent is still standing on its end. **Make sure you do not** pull the rope out from under the tent roll, as this will make a hole in the tent due to abrasion.



**One Piece Tent Installation Instructions, Slide # 4** Unroll the tent as shown.



**One Piece Tent Installation Instructions, Slide # 5** Unfold the first half of the tent.




**One Piece Tent Installation Instructions, Slide # 6** Unfold the last half of the tent. Stretch all four sides of tent to square up the tent in preparation for the setting of the tent stakes.



**One Piece Tent Installation Instructions, Slide # 7** Set two stakes 5' from each corner of tent as shown. Next run a string line from corner stake to corner stake and line up all stakes on each side using the string line as a reference. The tent stakes should be set next to the string line, in line with each brass grommet you see on the edge of the tent.



**One Piece Tent Installation Instructions, Slide # 8** Now it's time to actually begin erecting the tent! Take a side pole and insert the metal pin into the brass grommet as depicted here. Now raise the side pole, and hold it stationary while your helper attaches the tent "guy" rope to the stake using a double half hitch. Refer to next slide for a photo of this knot.

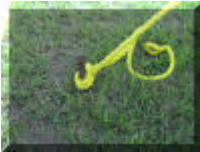

**One Piece Tent Installation Instructions, Slide # 9** This is photo of the "double half hitch" knot which you should use to attach the "Guy" rope to the tent stake.



**One Piece Tent Installation Instructions, Slide # 10** Stand up the second corner on the same end of the tent as the first corner you stood up. Now you have both corners of one end of the tent erected as shown.



**One Piece Tent Installation Instructions, Slide # 11** Next raise both the corners on the opposite end of the tent. You now have all four corners erected. Go ahead and insert all remaining side poles in the perimeter of the tent, and attach the "Guy" ropes. Leave all "Guy" ropes loose (plenty of slack) at this point.



**One Piece Tent Installation Instructions, Slide # 12** Time to raise center poles! Insert the pin on the end of the center pole through the brass grommet at the center pole fitting. Tie the center pole "jump rope" to the center pole as shown in the next photo.



**One Piece Tent Installation Instructions, Slide # 13** Secure the long center pole "jump rope" to the center pole using two half hitch knots about 1' below center pole pin. Now push the center pole all the way upright.



**One Piece Tent Installation Instructions, Slide # 14** Secure the center pole "Jump rope" to the center pole as shown



**One Piece Tent Installation Instructions, Slide # 15** Now the tent is in the air, and it is time to tie all the side pole "jump" ropes.



**One Piece Tent Installation Instructions, Slide # 16** At each side pole you will notice a white rope about 5' long hanging down from underneath the tent. Tie this rope to the side pole as shown, to secure the side pole to the tent.



**One Piece Tent Installation Instructions, Slide # 17** Begin tightening at the corners. Tilt the side pole inwards to give some slack on the "guy" rope. Have your helper pull all the slack out of the "guy" ropes, and then re-tie the ropes securely.



**One Piece Tent Installation Instructions, Slide # 18** After taking up all the slack on the "guy" ropes, push the side pole (it should be at about a 45 degree angle at this time) upright, using it as a lever to tighten the tent. Leave the pole slightly tilted inward. The pole should be at 90 degrees position relative to each corner stake. Repeat this process for each corner.



**One Piece Tent Installation Instructions, Slide # 19** Now tighten the sides of the tent. Tilt each side pole inwards to give some slack on the "guy" rope. Pull down on the tent edge, and have your helper pull all the slack out of the "guy" rope, and then re-tie the rope securely.



**One Piece Tent Installation Instructions, Slide # 20** After taking up all the slack on the "guy" rope, push the side pole (it should be at about a 45 degree angle at this time) upright, using it as a lever to tighten the tent.



**One Piece Tent Installation Instructions, Slide # 21** Now for side wall! Lay the roll of side wall on the ground between the side poles and the stakes as shown.



**One Piece Tent Installation Instructions, Slide # 22** Now unroll the side wall.



**One Piece Tent Installation Instructions, Slide # 23** Unfold the side wall in a long line between the side poles and the stakes.



**One Piece Tent Installation Instructions, Slide # 24** Beginning with the corner of the side wall which has the snaps, begin hanging the wall on the tent as shown.



**One Piece Tent Installation Instructions, Slide # 25** This shows the side wall hanging from the "curtain" rope.



**One Piece Tent Installation Instructions, Slide # 26** Each tent which is purchased with side walls includes enough wall to overlap 5' at each end.



**One Piece Tent Installation Instructions, Slide # 27** This shows how the wall overlaps on the ends. To create a doorway, simply fold each end shown here back on each side and re-hang to create a doorway. You have now completed erecting your Ohenry tent!

Quality Pole Tents, Frame Tents & Tension Tents by:  
Ohenry Productions Inc. 3859 Chappel Hill Rd. Waco, TX. 76705 254-714-1103